




**Extract the noForth-T ZIP-file**

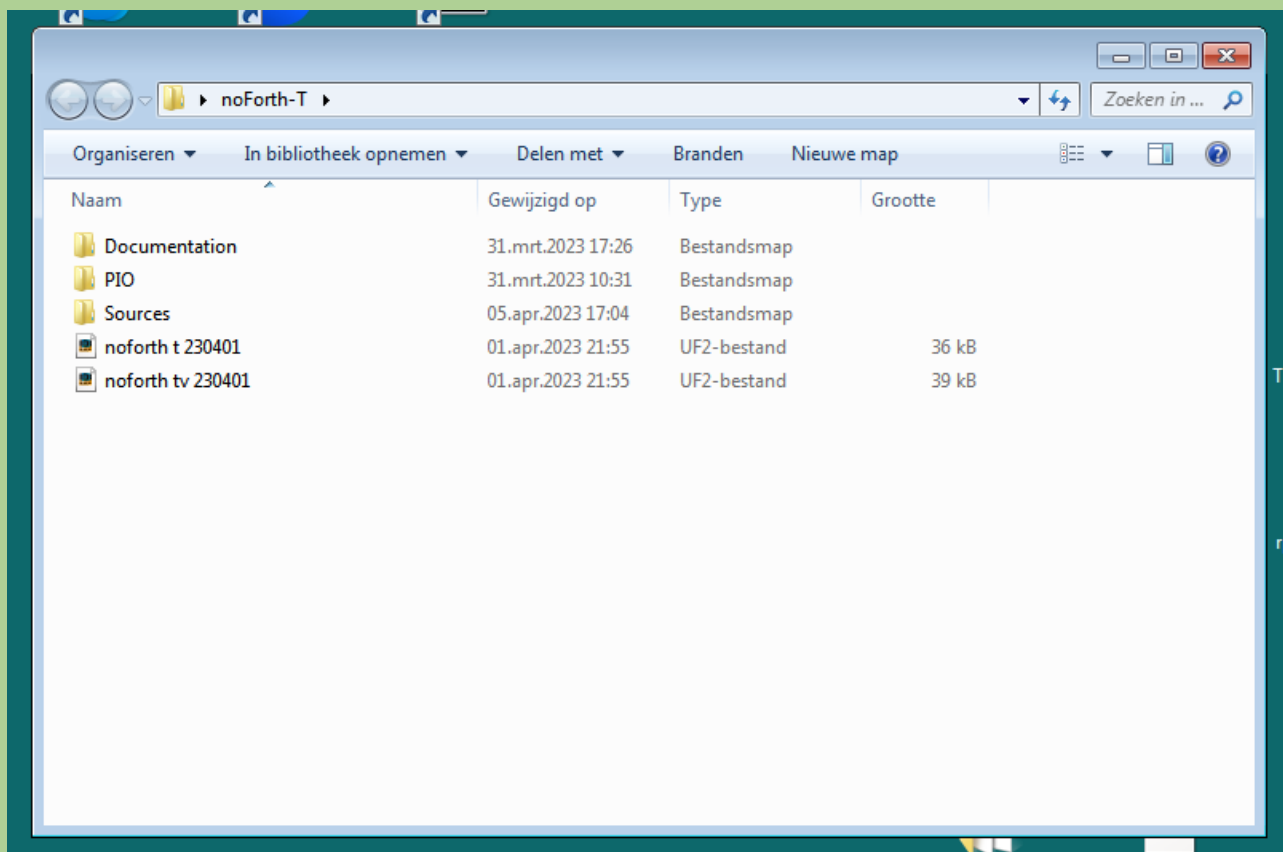


**Open the noForth-T folder**

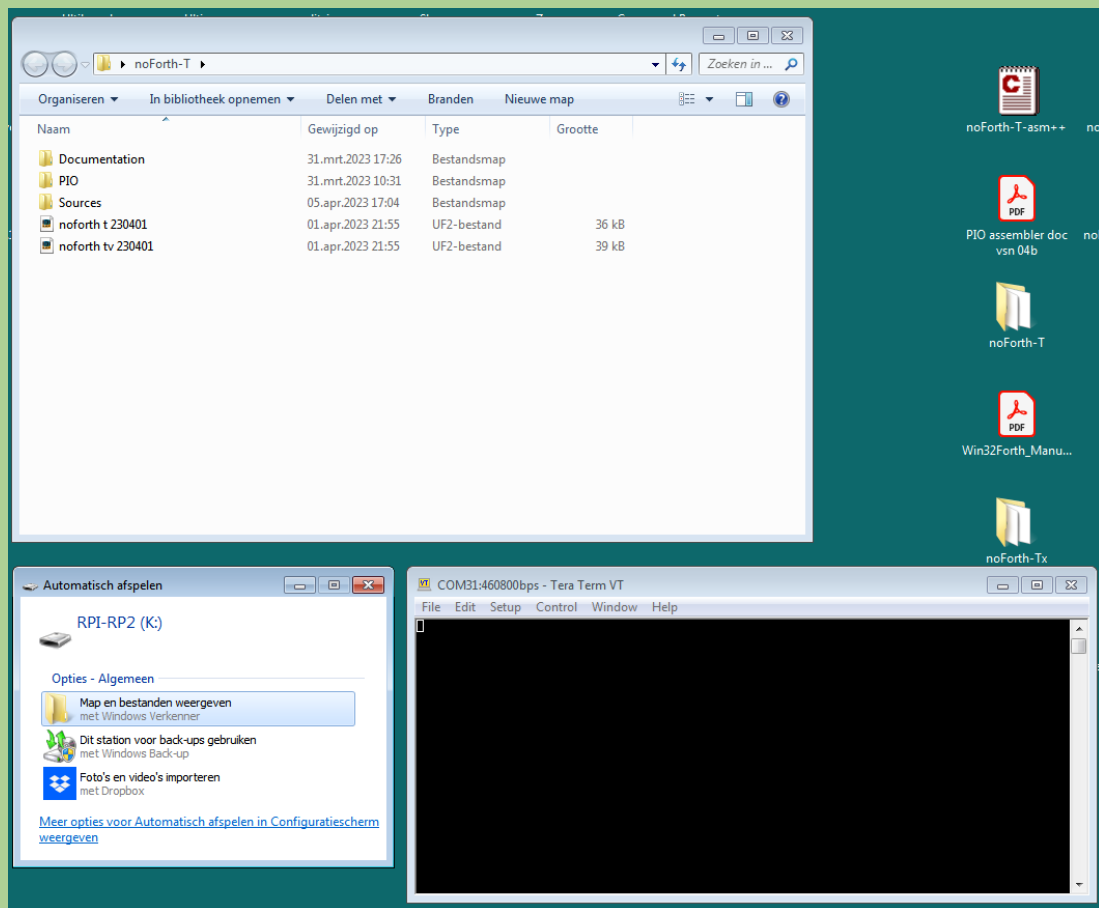


**Put Pico in boot mode, press bootsel**

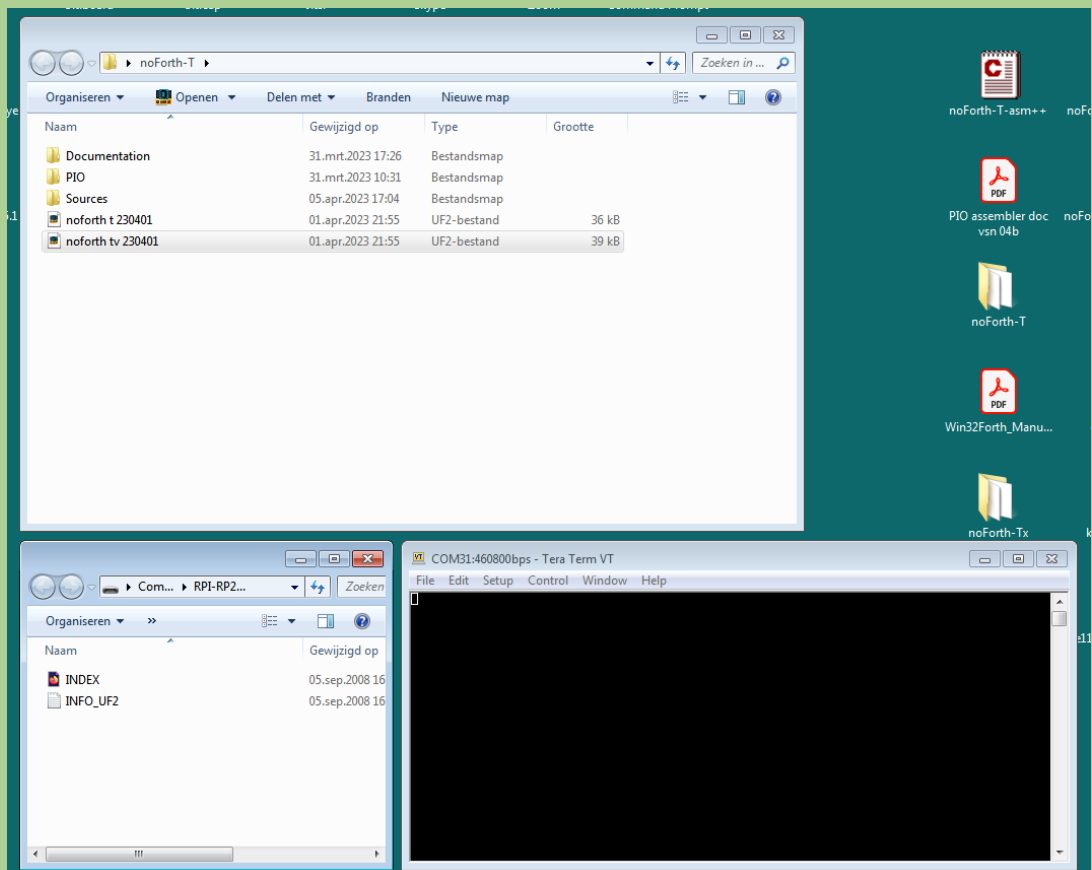

**Open RPI-RP2 folder & drag UF2-file to it**

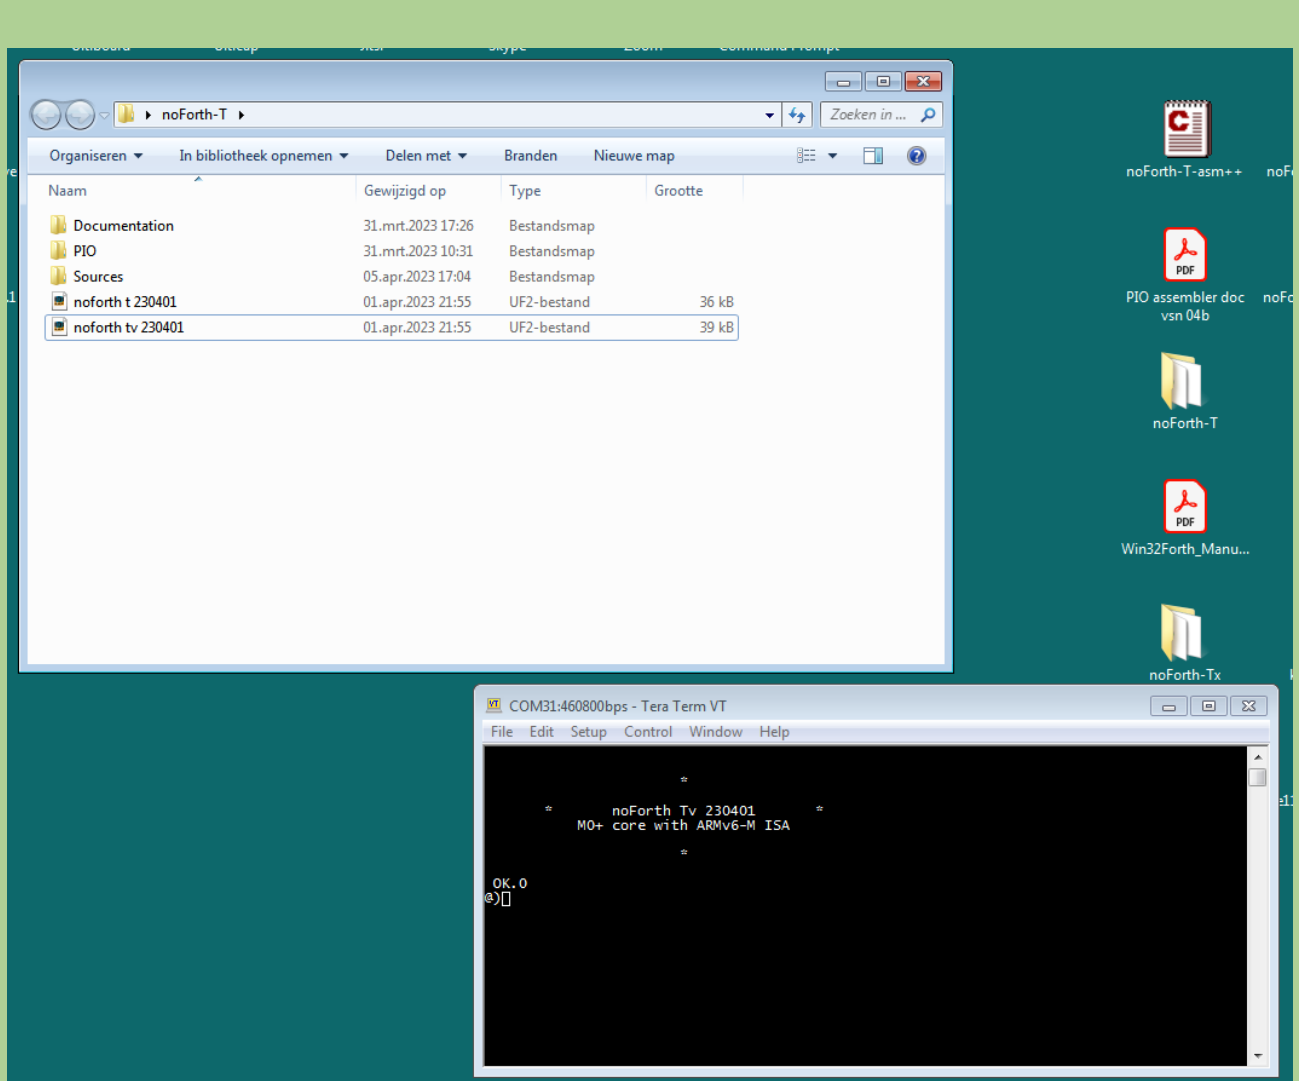

**Ok, now noForth starts immediately**

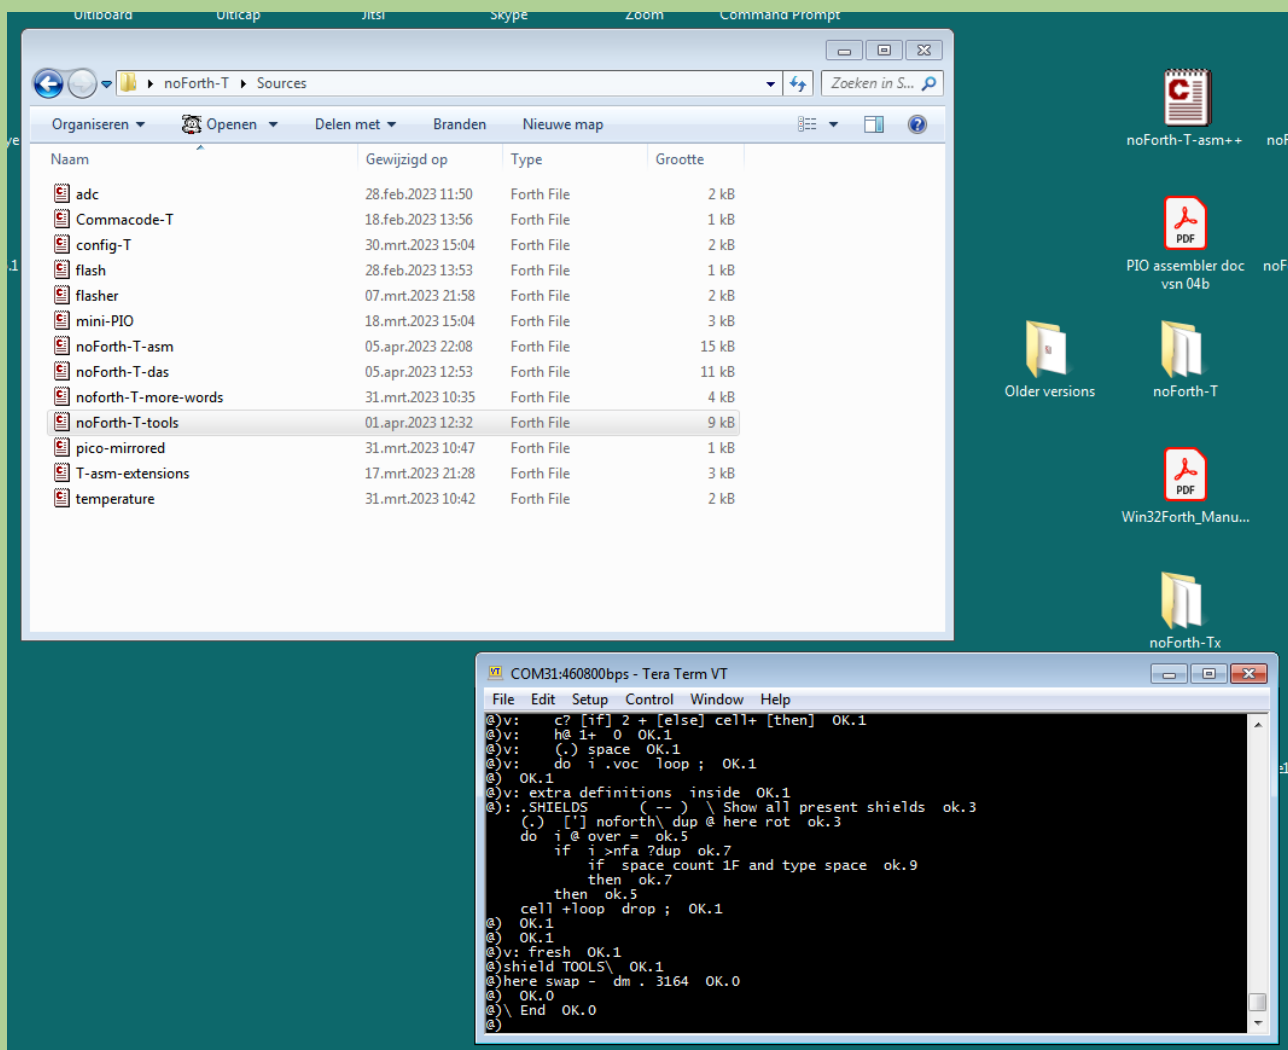

**Load 'tools' file and type: FREEZE**

**Ready**