



Extract the noForth-T ZIP-file

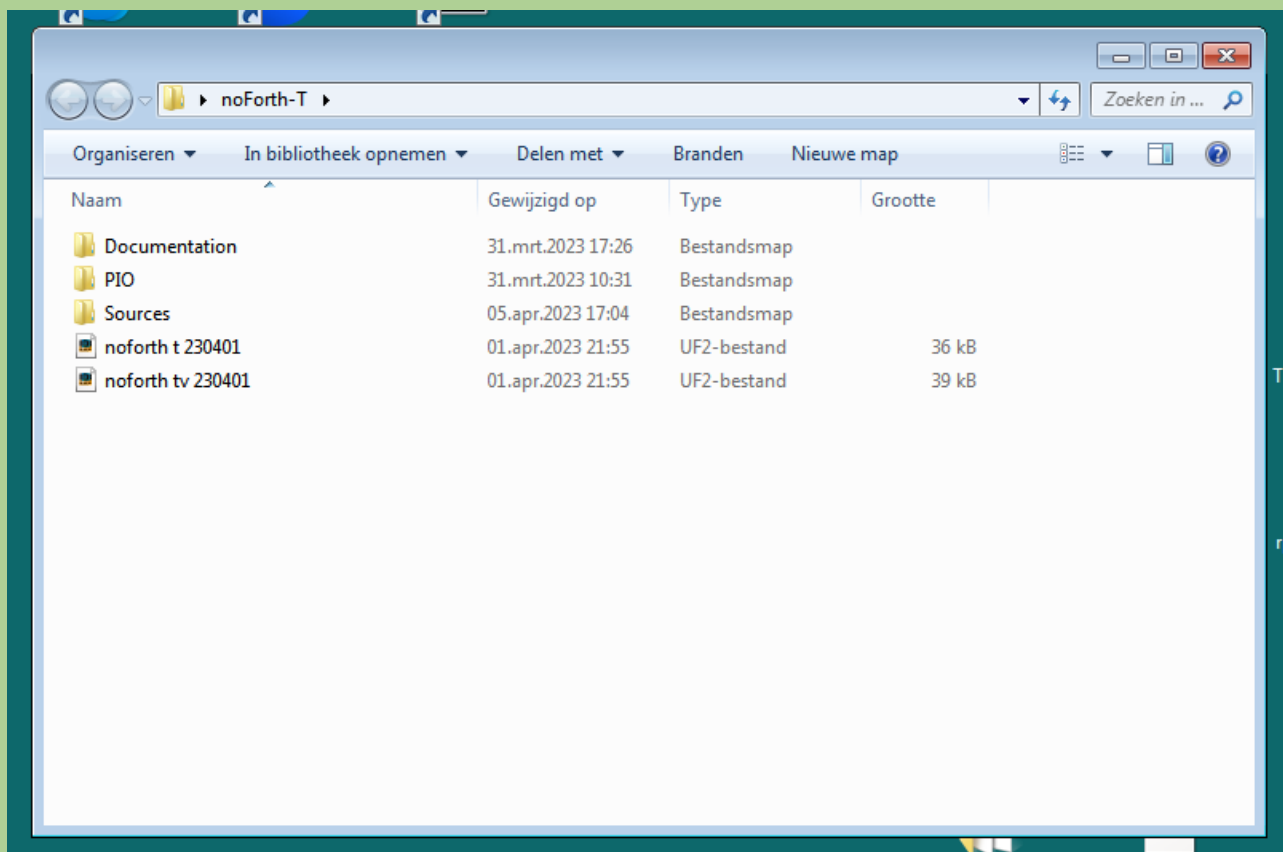


Open the noForth-T folder

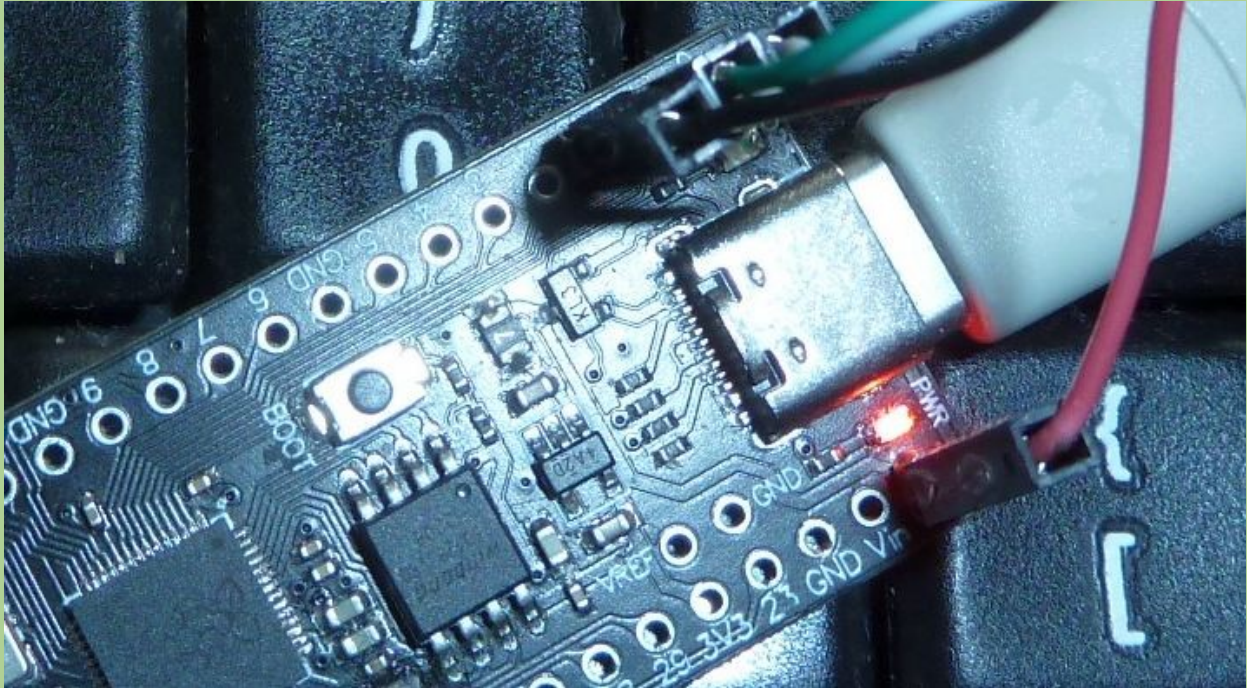


**Connect the correct USB cable
while pressing the BOOT or BOOTSEL key**


Note that! When there is a reset (RST) key on the board, just connect the USB cable. Then keep BOOTSEL pressed & press the reset key!

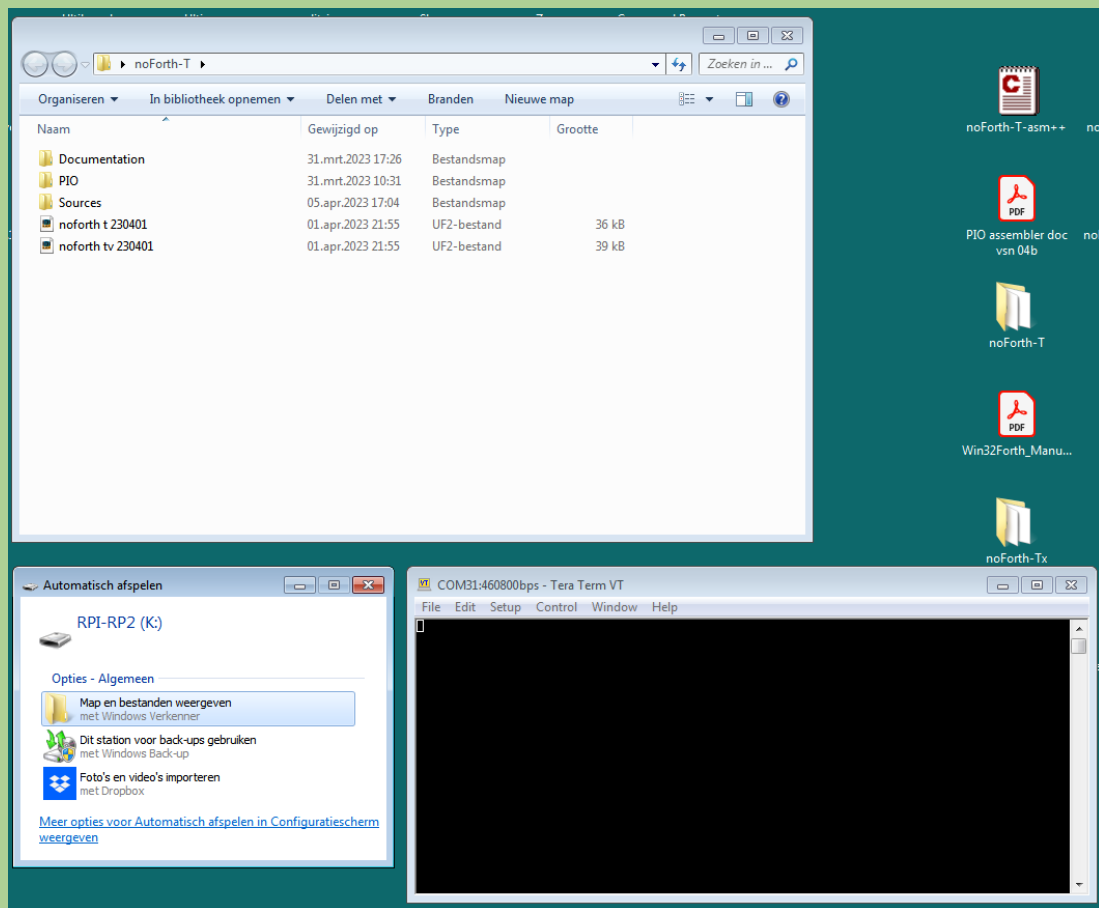

A new folder opens, named: RPI-RP2

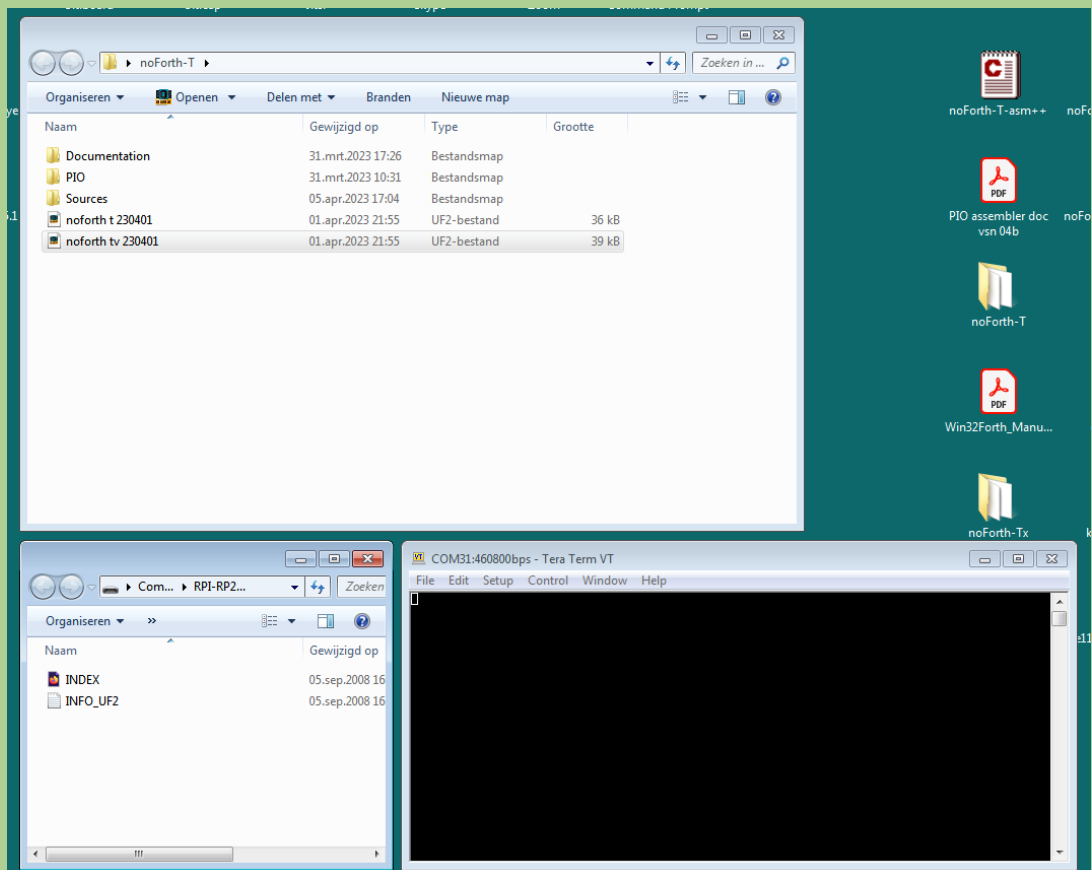


Drag the choosen noForth UF2-file to it

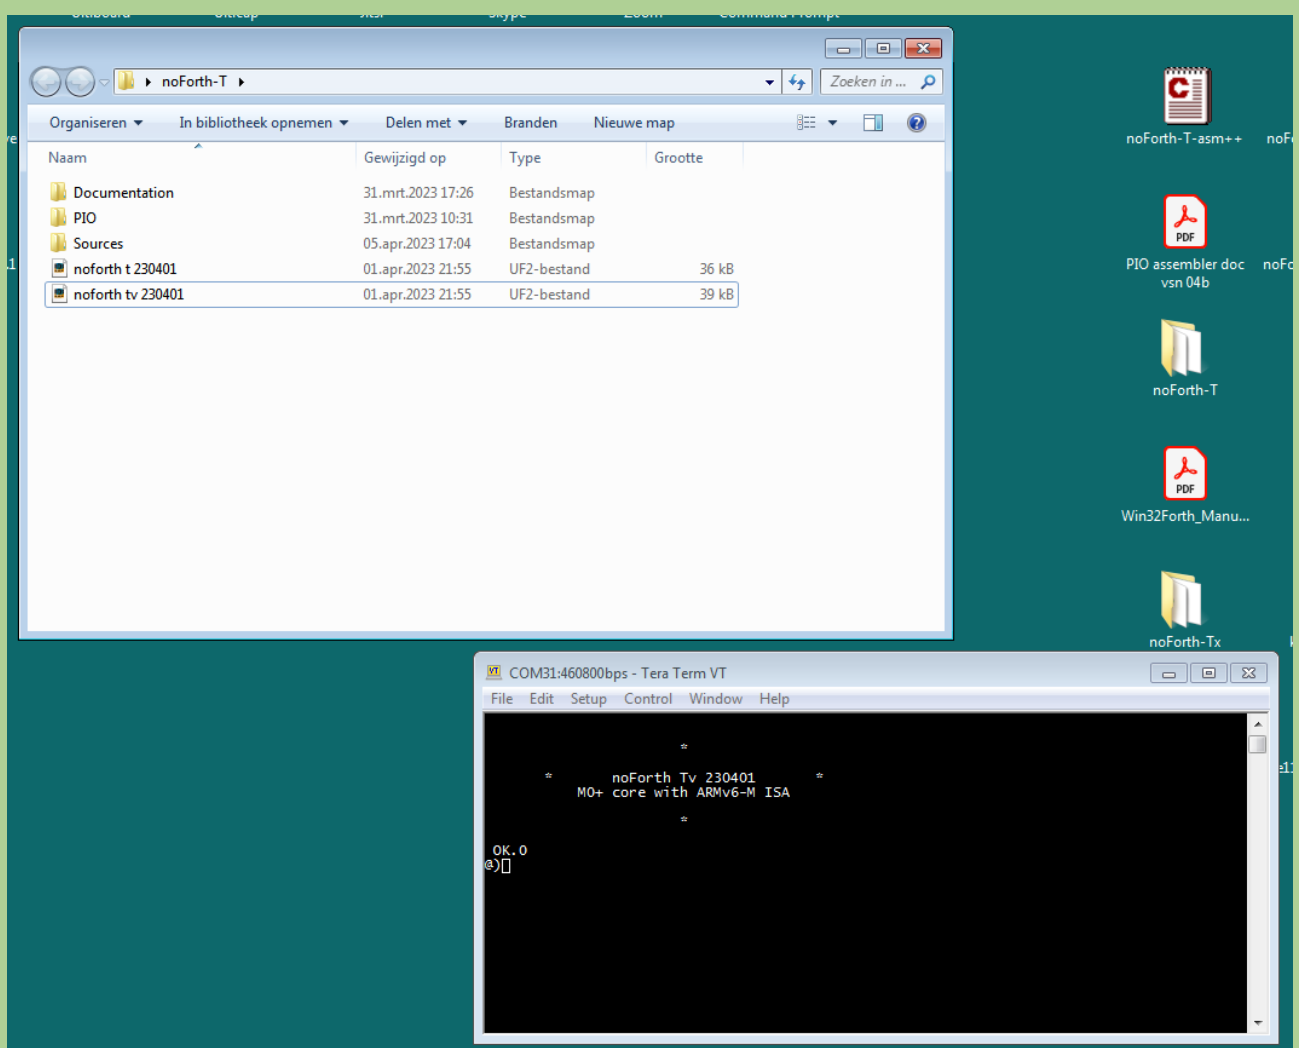

Ok, now noForth's start immediately.

**There are three noForth T flavours:
noForth T, noForth Tv and
finally noForth Tv duo,
this contains a noForth Tv for each core**

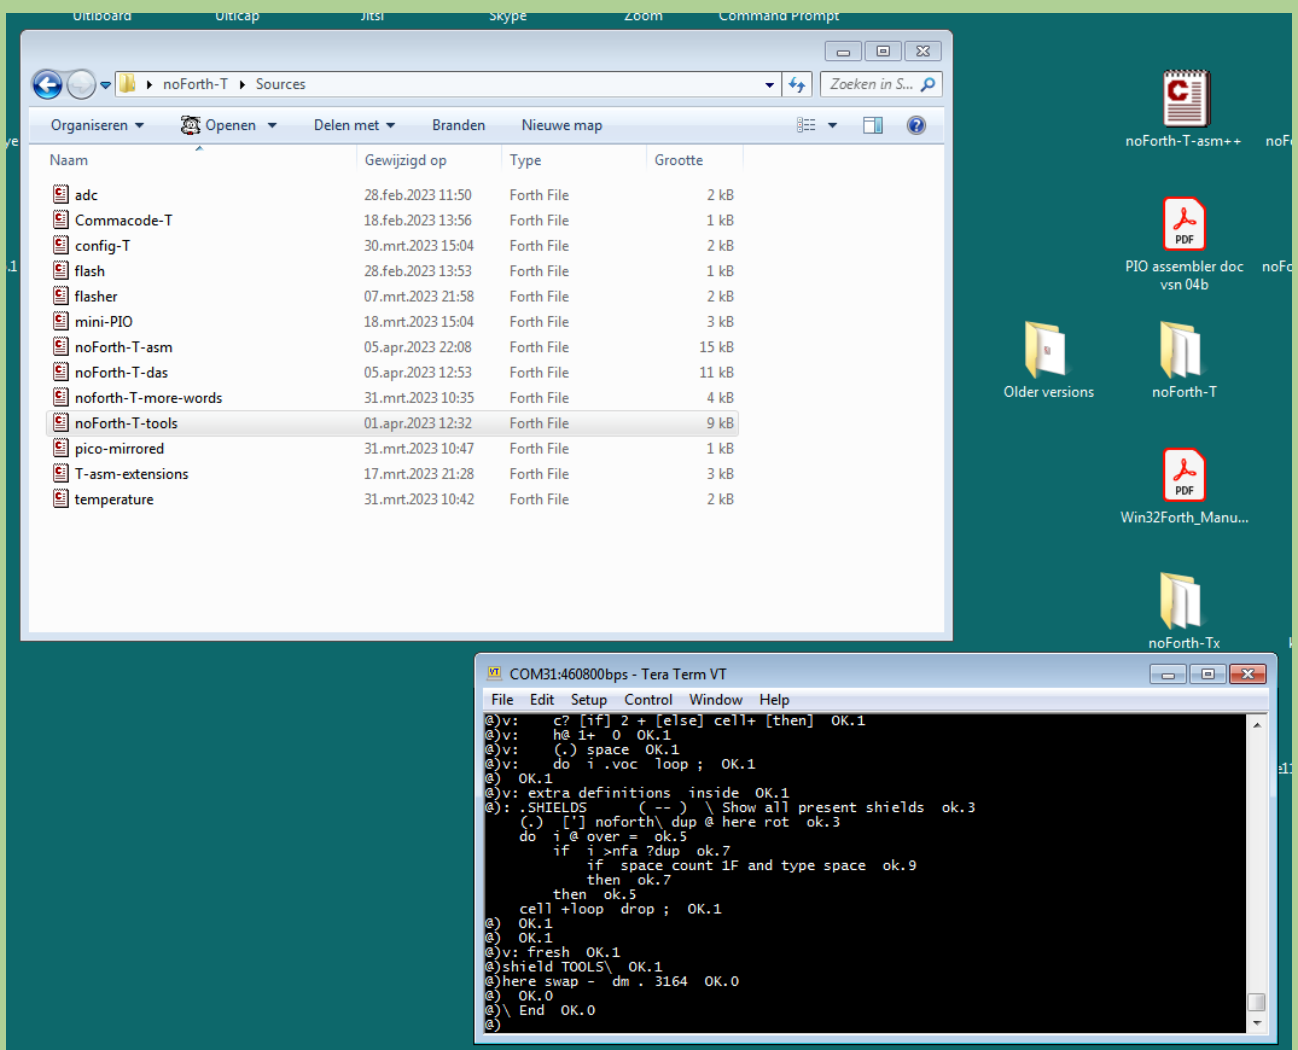

Load 'tools' file and type: FREEZE

Ready